

## BATTERY CHARGER

# NG5 – NG7 – NG9



Installation and User Manual



**ATTENTION:** To reduce the risk of electric shock, do not remove cover. Refer servicing to qualified service personnel. Disconnect the mains supply before connecting or disconnecting the links to the battery.



Read the Instruction Manual carefully before use. Verify that the selected charge curve is suitable for the type of battery You have to re-charge.

---

Explanation of Graphical Symbols:



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the equipment's enclosure; that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the equipment.

---

This product is covered by warranty.

The relative warranty certificate is attached to the Instructions Manual.

If the Manual is not provided with this certificate, please ask your retailer for a copy.

For further references, please write the serial number in the proper space:

**Serial No.** \_\_\_\_\_

Information contained in this Manual relates to ZIVAN S.r.l. property which reserves the right to supply for the exclusive use of customers.

No other use is allowed without a written authorization supplied by ZIVAN S.r.l.

ZIVAN S.r.l. will be not responsible for inaccuracies contained in this manual due to print or translation errors. ZIVAN S.r.l. has the right to make changes or improvements, also for the user interest, without prejudicing the essential characteristic of operation and safety.

**Copyright © 2003 by ZIVAN S.r.l.**  
First Edition

## Installation and safety instructions


Battery charger NG5-7-9 has been designed to provide safety and reliable. It is necessary to observe the following precautions in order to avoid damage to persons and to the battery charger:

- Read the installation instructions contained in this Manual carefully. For further information put the Manual in a proper place.
- Fix the battery charger to a stable surface through the appropriate holes inserted on the fixing flanges. In case of installation on a vehicle it is advisable to use antivibration supports.
- Preferably the charger should be installed in the vertical position with the fan facing up. The horizontal installation is allowed. Never install in the vertical position with the fan facing down.
- Ensure all ventilation ports are not obstructed, to avoid the overheating. Do not put the battery charger near heat sources. Make sure that free space around the battery charger is sufficient to provide adequate ventilation and an easy access to cables sockets.
- Protect the battery charger from ingress of water. Do not pour liquids inside the case.
- Verify that the available supply voltage corresponds to the voltage that is stated on the battery charger name plate. In case of doubt, consult a retailer or local Electric Supply Authority.
- For safety and electromagnetic compatibility, the battery charger has a 3-prong plug as a safety feature, and it will only fit into an earthed outlet. If you can not plug it in, chances are you have an older, non-earthed outlet; contact an electrician to have the outlet replaced. Do not use an adapter to defeat the earthing.
- To avoid damaging the power cord, do not put anything on it or place it where it will be walked on. If the cord becomes damaged or frayed, replace it immediately.
- If you are using an extension cord or power strip, make sure that the total of the amperes required by all the equipment on the extension is less than the extension's rating.
- Disconnect the mains supply (turn off the switch) before connecting or disconnecting the links to the battery.
- To recharge Lead Acid batteries: **WARNING: Explosive Gas – Avoid flames and sparks.** The battery must be positioned in a correctly cooled place.
- Do not use to charge batteries installed on board of thermal engine cars.
- Avoid recharging of non-rechargeable batteries.
- Verify that the nominal voltage of the battery to be re-charged corresponds to the voltage stated on the battery charger name plate.
- Verify that the selected charging curve is suitable for the type of battery to be re-charged. In case of doubt, consult Your retailer. ZIVAN S.r.l. will not accept any responsibility in case of mistaken choice of the charging curve that may cause irreversible damage to the battery.
- In order to avoid voltage drop, thereby assuring 100% charge at the battery, the output cables must be as short as possible, and the diameter must be adequate for the output current.
- Do not try to service the battery charger yourself. Opening the cover may expose you to shocks or other hazards.
- If the battery charger does not work correctly or if it has been damaged, unplugged it immediately from the supply socket and from the battery socket and contact a retailer.

### Operating principle

The battery charger considerably affects battery life and performances, which is the main part of every electric vehicle.


A non controlled traditional battery charger (rectifier) provides a simple **direct AC/DC** conversion.

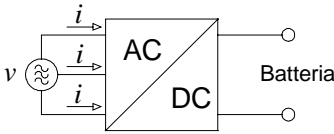

Disadvantages of this solution are:

- Low efficiency
- Large physical size
- Long charge times
- Charge depends on changes in the mains supply (with overcharge danger in the final charge phase)

In modern battery chargers these disadvantages are solved with an **indirect AC/DC** conversion, by passing through an intermediate DC/DC conversion.

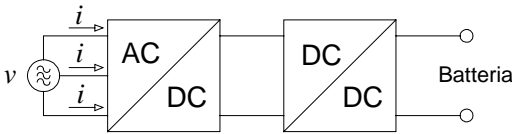


This is the usual method of operation for the SMPS (Switching Mode Power Supply) at high power. This solution gives a good performance for minimum costs and physical dimensions using switches more faster and powerful (modern technology).

The main advantages of this solution are:


- High efficiency
- Reduced dimensions
- Short charge times
- Charge independent from the changes of the mains supply
- Electronic control that provides the desired charge curve

The advent of electrical problems (due to commutation) has imposed the introduction of adequate filtering to satisfy requirements of EMC 89/336/EEC directive for electromagnetic compatibility.

### Block Diagram

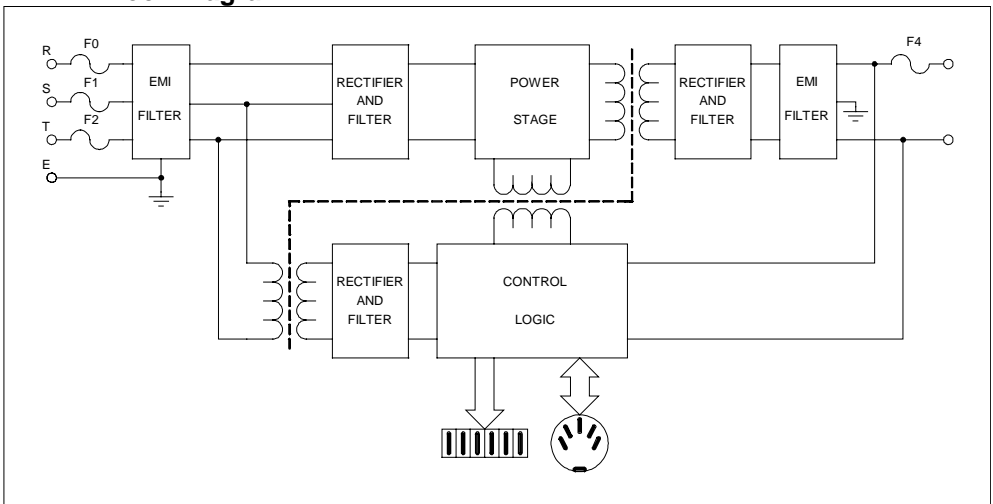


## Charging Level Indicator

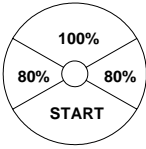

RED LED shows that the battery is in the initial charging phase.  
 YELLOW LED shows that the battery charger has reached 80% of charge.  
 GREEN LED shows that the battery has reached 100% of charge.  
 Further information can be found in the description of the Charging Curve.

## Line Alarm Indicator



This RED LED turns on when there is a phase missing on the mains.  
 In this situation the battery charger will not operate and the charging level indicator changes to yellow.  
 (Check mains and input fuses).

## Alarms (Two-tone audible message)


An two-tone audible message and the flashing LED shows that an Alarm situation has occurred:

Condition	Alarm Type	Description (Action)
Audible message + RED flash	Battery Presence	Battery disconnected or not in conformity. (Verify the connection and the nominal voltage).
Audible message + YELLOW flash	Thermal Sensor	The thermal sensor is disconnected during the re-charge or it is out working range. (Verify the connection of the sensor and measure the temperature of the battery).
Audible message + GREEN flash	Timeout	Phase 1 and/or Phase 2 have a duration in excess of the maximal allowed. (Verify the battery capacity).
Audible message + RED-YELLOW flash	Battery Current	Loss of output Current control. (Failure of the control logic).
Audible message + RED-GREEN flash	Battery Voltage	Loss of output Voltage control. (Battery disconnected or failure of the control logic).
Audible message + YELLOW -GREEN flash	Selection	An unavailable configuration has been selected (Verify the selector's position)
Audible message + RED-YELLOW-GREEN flash	Thermal	Overheating of semiconductors. (Verify the fan operation).

When there is an alarm the battery charger stops supplying current.

## Thermal Sensor and/or External Indicator

Thermal Sensor and External Indicator are Options that have to be connected to the 5 poles socket 180°.

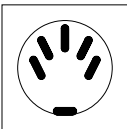


Unless otherwise stated, the compensation of the Battery Voltage in function of the temperature of the Thermal Sensor is of  $-5\text{mV}/^\circ\text{C}$  for battery cell.  
 The control range of the Thermal Sensor goes from  $-20^\circ\text{C}$  to  $+50^\circ\text{C}$ .

The External Indicator reflects exactly the LED Indicator which is placed on the equipment.

Further information can be found in the description of the Charging Curve.

### Auxiliary Contacts

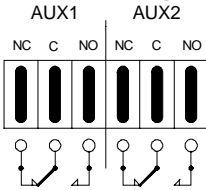


Technical Features: changeovers contacts  
 0,3A 125VAC  
 0,3A 110VDC  
 1A 30VDC

Connector: faston 6,3 × 0,8 mm

Unless otherwise stated, the auxiliary contacts provide the following functions:


Section	Function	Description
AUX1	Mains Presence	When the equipment is switched on, the contact Normally Open (NO) CLOSES and instead the contact Normally Closed (NC) OPENS.
AUX2	End of charge or Trickle Phase	When the Stop Phase or the No Stop Phase is reached, the contact Normally Open (NO) CLOSES and instead the contact Normally Closed (NC) OPENS.

### LED Bar Graph and Digital Instrument



The LED Bar Graph is an Option that shows a percentage indication of output current in comparison with its max. value. The Digital Instrument indicates the output tension expressed in Volt (V) and the output current expressed in Ampère (A). The corresponding unit of measure of the visualised numbers is indicated by the LED V or A. By means of the MODE button, it is possible to select A or V to be visualised.

N.B. The instrument indicates by **-LO** the output tensions, which are inferior to the nominal value of the battery.

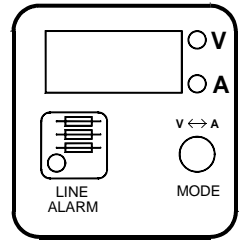

### Battery

A battery is characterised by two sizes: tension and capacity.

#### Tension:

Each element has a nominal tension, which depends on the type of battery (no matter what size).

In order to reach higher tension, many elements are connected in series, so creating a "BATTERY" of elements.

The number of elements is calculated by dividing the nominal tension of the battery for the tension of each single element in the table:

Type	Nominal Tension
Pb	2 V/cell
NiCd	1,2 V/cell
NiMH	1,2 V/cell
NiZn	1,714 V/cell

#### Capacity:

It is the quantity of electric charge that the batteries can supply to an external circuit before the tension decreases under the final limit value and it is obtained by multiplying the intensity of the discharging current **I**, expressed in ampere (A), for the discharging time **t** expressed in hours (h): **C = I x t**.


The traction battery capacity is normally referred to the discharging system of 5h: **C5 = I x 5h**.

The capacity values that can be recharged by the battery chargers can be found in the description of the Charging Curve (this value is not present in the curves able to charge any capacity).




This device is in conformity with the Low Voltage directive 73/23/EEC and EMC directive 89/336/EEC and their further modifications.

### Mechanical dimension

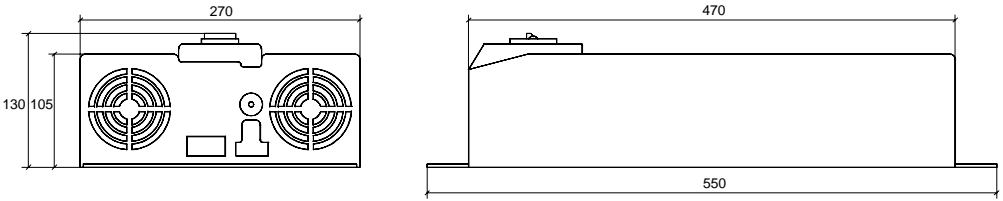

**N.B.** All dimensions are expressed in mm.

### Drilling details

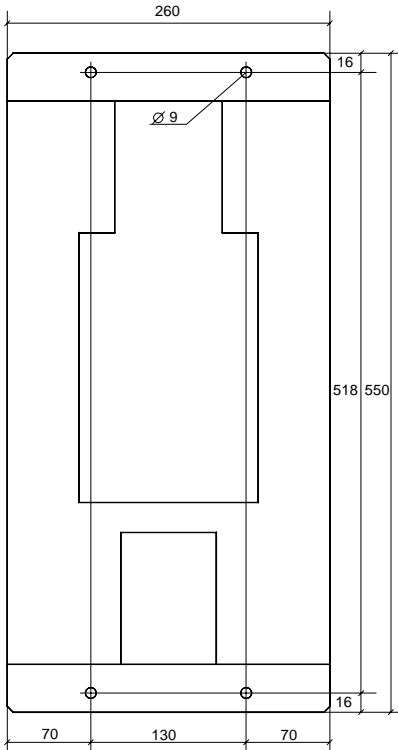

**UP**



**Advised Installation**

**N.B.** All dimensions are expressed in mm.

## TECHNICAL FEATURES

Ta=25°C unless otherwise specified

### Mains side

Description	Symbol	Test Condition	Value and/or Range	Unit
Supply Voltage Three-phase	V <sub>in</sub>	-	400 ± 15%	V <sub>eff</sub>
Frequency	f	-	50 ÷ 60	Hz
Absorbed Maximum Current per phase	I <sub>fmax</sub>	P = P <sub>max</sub>	10 (NG5) 14 (NG7) 18 (NG9)	A <sub>eff</sub>
Inrush Current	-	V <sub>in</sub> =400V <sub>eff</sub>	< 2,35	A
Power Factor	cosφ	P = P <sub>max</sub>	0,72	-
Absorbed Minimum Power	P <sub>inmin</sub>	End of charge	< 10	W
Absorbed Maximum Power	P <sub>inmax</sub>	P = P <sub>max</sub>	5 (NG5) 7 (NG7) 9 (NG9)	kW

### Battery side

Description	Symbol	Test Condition	Value and/or Range	Unit
Output current	I	-	See curve	-
Maximum output current	I <sub>1</sub>	Phase 1	See curve	A
Output current ripple	-	I = I <sub>1</sub>	< 5%	-
Absorbed current	I <sub>a</sub>	Equipment turned off	< 0,5	mA
Output voltage	U	-	See curve	-
Constant output voltage	U <sub>1</sub>	Phase 2	See curve	V
Thermal compensation of output voltage	dU <sub>1</sub> /dT	Phase 2	-5	mV / (°C·cell)
Operating range of Temperature Sensor	ΔT	-	from -20 to +50	°C
Output voltage ripple	-	U = U <sub>1</sub>	< 1%	-
Maximum power supplied	P <sub>max</sub>	U = U <sub>1</sub> , I = I <sub>1</sub>	4350 (NG5) 6100 (NG7) 7830 (NG9)	W
Output capacity	C	-	Depend on the model (>0,2)	mF



## General

Description	Symbol	Test Condition	Value and/or Range	Unit
Operating range of temperature	$\Delta T$	-	from -20 to +50	°C
Maximum relative humidity	RH	-	90%	-
Switching frequency	$f_c$	-	$25 \pm 5\%$	kHz
Efficiency	$\eta$	At each operation condition	$> 87\%$	-
Maximum size	a <b>x</b> b <b>x</b> c	Without connecting cable	550 <b>x</b> 270 <b>x</b> 120	mm
Weight	-	Without connecting cable	9	kg
Enclosure class	-	-	IP20	-

## Protection and Safety

Description	Symbol	Test Condition	Value and/or Range	Unit
Insulation	-	Mains to Battery side	1250	$V_{AC}$
Insulation	-	Mains side to Earth	500	$V_{DC}$
Insulation	-	Battery side to Earth	500	$V_{DC}$
Leakage current	$I_L$	Supplied equipment	$< 1$	mA
Input fuses	F0-F1-F2	Inside the equipment	20 (NG5) 20 (NG7) 25 (NG9)	A
Output fuse	F4	Inside the equipment	about 1,2 <b>x</b> 11	A
Minimum output voltage of operation (Battery Detector)	-	Equipment turn on	1,5	V/cell
Maximum output voltage	$U_m$	Phase 3 (IUIa - IUIUo)	See curve	V
Reverse output polarity	-	At the connection to the Battery	Protection provided by fuse F4	-
Thermal protection of semiconductors (Temperature of Thermal Alarm)	-	$T_a=55^\circ C$	100	°C
Safety Requirements (Rules)	-	EN60335-1, EN60335-2-29	-	-
EMC Requirements (Rules)	-	EN55014-1, EN61000-3-3 EN55014-2, EN61000-4-2 EN61000-4-4, EN61000-4-5 EN61000-4-6, EN61000-4-11	-	-

**Design, production and sale:**

**ZIVAN SRL**

Via della Costituzione, 36  
42028 Poviglio (RE) ITALIA  
Tel. +39 0522 960593  
Fax +39 0522 967417  
info@zivan.it



**SALES OFFICES**

**ITALY**

ZAPI SPA  
Via Parma, 59  
42028 Poviglio (RE)  
Tel. +39 0522 960050  
Fax +39 0522 960259  
info@zapispa.it

**SLOVENIA/CROATIA**

PROTEUS ELECTRIC SRL  
Via di Noghere, 94/1  
34147 Muggia Aquilina (TS)  
Tel. +39 040 232188-232388  
Fax +39 040 232440

**U.S.A.**

ELECTRIC CONVERSIONS  
215, 14th Sreet  
Sacramento CA 95814  
Tel. 916- 441-4161  
Fax 916- 444-8190  
elcon@jps.net

**SPAIN**

JZ RECIELCA S.L.  
C / Progrés, 2-A. Gavà  
08850 Barcelona  
Tel. +34 93 6382383  
Fax +34 93 6383166  
jz.administra@terra.es

**GREECE**

START Industrial Batteries  
7-9 Agiou Filippou Street  
18540 Piraeus  
Tel. +301 4179 951  
Fax +301 4179 950  
startbatteries@ath.forthnet.gr

**FRANCE**

URMA SARL  
30, Rue de Morvan Silic 503  
94623 Rungis Cedex  
Tel. +33 1 45609477  
Fax +33 1 46750871  
urma@wanadoo.fr

**HOLLAND**

SPI Special Product for Industry  
Vlijtseweg 232  
7317 AN Apeldoorn  
Tel. +31 55 5211111  
Fax +31 55 5222366

**GERMANY**

ATECH Antriebstechnik GmbH  
Gewerbepark Lindach D7  
84489 Burghausen  
Tel. +49 8677 98090  
Fax +49 8677 980920  
info@atech-antriebstechnik.de

**SWEDEN**

ETP KRAFTELEKTRONIK AB  
Järningen, 15  
43323 Partille  
Tel. +46 31 440715  
Fax +46 31 449720  
batman@etpab.se

**CHINA**

CNEEC  
N° 1 Lianhuahe Hutong  
Beijing 100036  
Tel. +86 10 63403913  
Fax +86 10 63261083  
zhoux@cneec.com.cn

**SWITZERLAND**

ASMO ENGINEERING AG  
Glashütte, 58  
CH 4229 Beinwil (SO)  
Tel. +41 61 3136400  
Fax +41 61 3136401  
asmokarts@datacomm.ch

**UNITED KINGDOM**

EZ ELECTROFIT ZAPI LTD  
Unit 2 - Halesfield 17 - Telford  
Shropshire TF7 4PW  
Tel. +44 1 952 582482  
Fax +44 1 952 581377

**SPAIN**

VARELEC SCCL  
c / Lope de Vega 10-12 Bajos  
08005 Barcelona  
Tel. +34 93 3032565  
Fax +34 93 3032565  
varelec@teleline.es

**BELGIUM**

BATTERY SUPPLIES n.v.  
Lindestraat, 89A  
8790 Waregem  
Tel. +32 56 617977  
Fax +32 56 617955  
battery.supplies@skynet.be

CHARGING CURVE



Electric Conversions  
Distributor of ZIVAN Battery Chargers  
215 14th Street, Sacramento CA 95814  
Tel. 916-441-4161  
Fax 916-444-8190  
E-mail: [elcon@jps.net](mailto:elcon@jps.net)  
Web: [www.zivanusa.com](http://www.zivanusa.com)